


YAMAHA

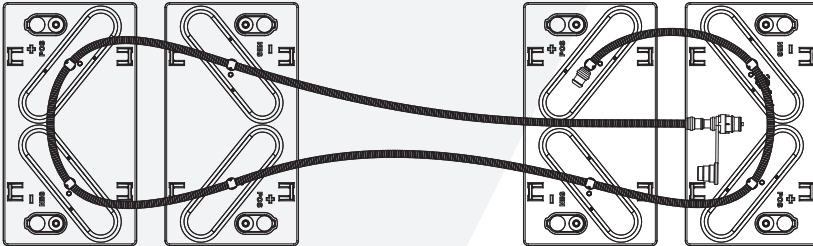

Yamaha "The Drive" 12-Volt Batteries - (2006 or newer)

Installing a HydroLink™ Watering System on your Trojan Batteries

IMPORTANT: For detailed installation instructions, review Trojan's HydroLink Watering System with Snake™ Tubing User's Guide included with the kit. Make sure to follow instructions on Page 4 of the guide before installing.

STEP 1

Remove current vent caps and insert HydroLink vents.



STEP 2

Firmly press HydroLink vents down. Ensure HydroLink vents are completely seated to avoid electrolyte spillage.

WARNING! Press in the HydroLink vent with your hands only - do not use a hammer.




STEP 3


Install Snake tubing. Review the proper diagrams for correct Snake tube routing based on the application and manufacturer's vehicle. Once reviewed, remove the red center plastic plug off the HydroLink vent.



Then snap each Snake plug into each HydroLink vent. Press firmly until you hear a click.

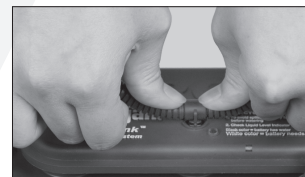


If you don't hear a click, it has not been installed correctly.

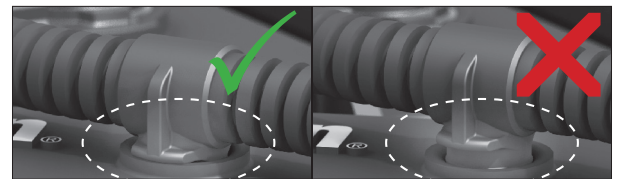


Correctly Installed

Incorrectly Installed

Your HydroLink Watering System is now ready for use.

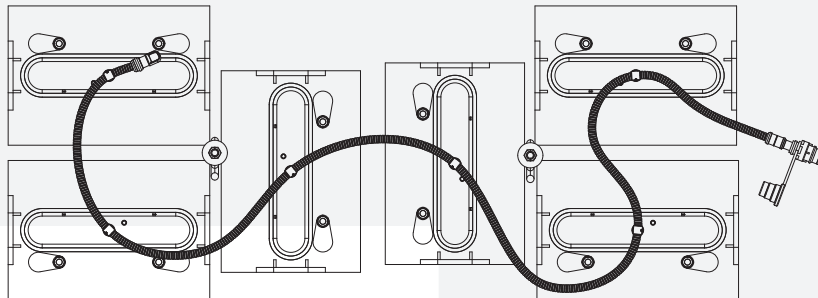


Yamaha 8-Volt Batteries

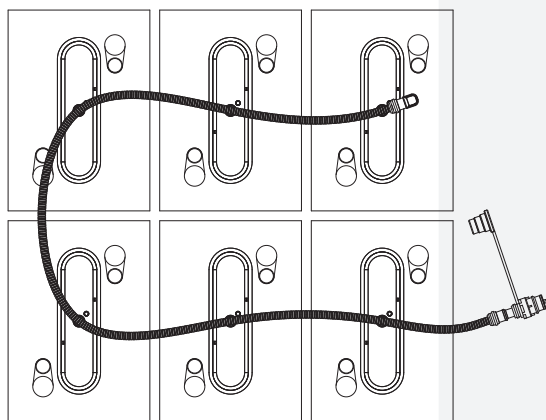


Yamaha 6-Volt Batteries

E-Z-GO

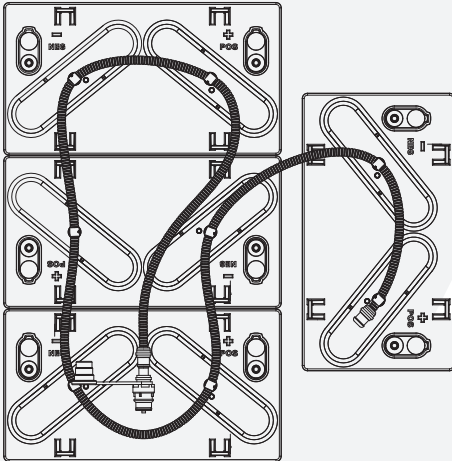

E-Z-GO "RXV" 12-Volt Batteries

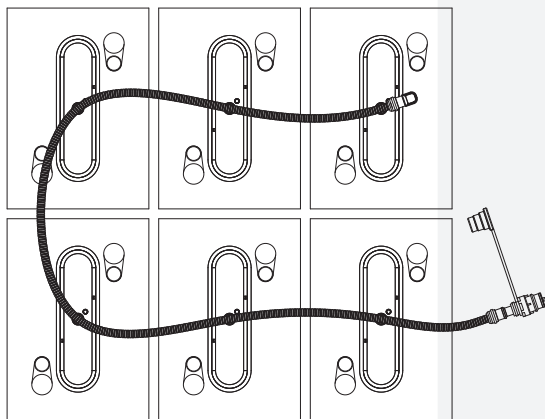

E-Z-GO "TXT" 6-Volt / 8-Volt Batteries

* Terminal configuration may differ on 8-Volt battery.

Installing a HydroLink™ Watering System on your Trojan Batteries

IMPORTANT: For detailed installation instructions, review Trojan's HydroLink Watering System with Snake™ Tubing User's Guide included with the kit. Make sure to follow instructions on Page 4 of the guide before installing.

STEP 1

Remove current vent caps and insert HydroLink vents.



STEP 2

Firmly press HydroLink vents down. Ensure HydroLink vents are completely seated to avoid electrolyte spillage.

WARNING! Press in the HydroLink vent with your hands only - do not use a hammer.




STEP 3


Install Snake tubing. Review the proper diagrams for correct Snake tube routing based on the application and manufacturer's vehicle. Once reviewed, remove the red center plastic plug off the HydroLink vent.



Then snap each Snake plug into each HydroLink vent. Press firmly until you hear a click.

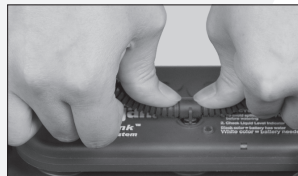

If you don't hear a click, it has not been installed correctly.

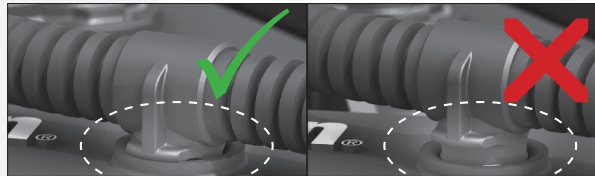


Correctly Installed


Incorrectly Installed

Your HydroLink Watering System is now ready for use.


CLUB CAR

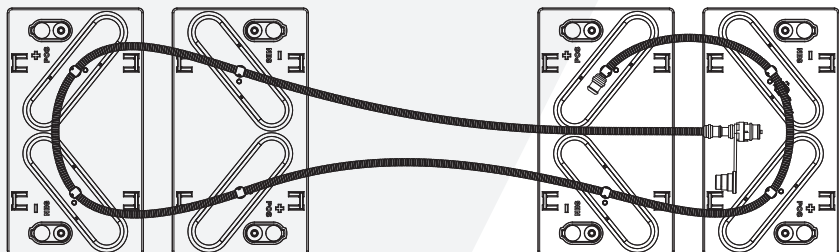

Club Car "Precedent" 12-Volt Batteries - (2008 or newer)

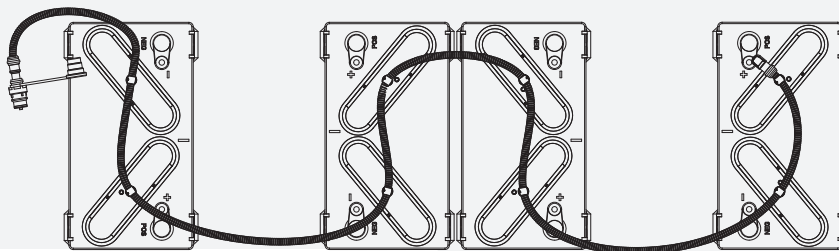

Club Car "DS" 12-Volt Batteries - (2006 or newer)

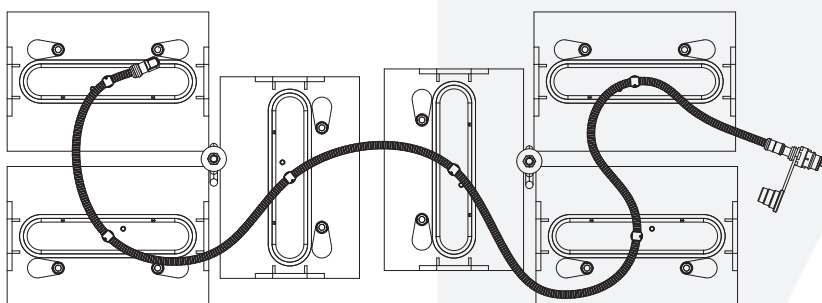

Club Car "Precedent" 8-Volt Batteries - (2008 or newer)

Installing a HydroLink™ Watering System on your Trojan Batteries

IMPORTANT: For detailed installation instructions, review Trojan's HydroLink Watering System with Snake™ Tubing User's Guide included with the kit. Make sure to follow instructions on Page 4 of the guide before installing.

STEP 1

Remove current vent caps and insert HydroLink vents.



STEP 2

Firmly press HydroLink vents down. Ensure HydroLink vents are completely seated to avoid electrolyte spillage.

WARNING! Press in the HydroLink vent with your hands only - do not use a hammer.




STEP 3


Install Snake tubing. Review the proper diagrams for correct Snake tube routing based on the application and manufacturer's vehicle. Once reviewed, remove the red center plastic plug off the HydroLink vent.



Then snap each Snake plug into each HydroLink vent. Press firmly until you hear a click.

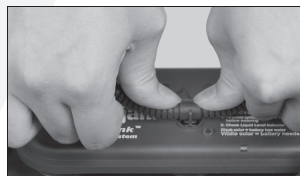

If you don't hear a click, it has not been installed correctly.

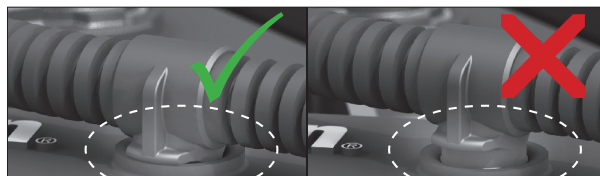

Correctly Installed

Incorrectly Installed

Your HydroLink Watering System is now ready for use.



Canada

+1 (888) 271-8888
sales@magnacharge.com

United States

+1 (844) 370-0258
sales@magnacharge.com

Panama

+011 (507) 209-4776
info@magnachargepa.com

www.MAGNACHARGE.com